

Quick Release Pin K&F 'LIFTING PIN'



User's Manual

Translation of the original instructions

Version 1.8

Released: 17.05.2017



**Important Information,
Please Read Before Use!**

KLING & FREITAG GmbH
Wohlenbergstrasse 5
D-30179 Hannover
TEL +49 (0) 511 96 99 70
FAX +49 (0) 511 67 37 94
www.kling-freitag.de



Table of contents

1	Introduction	4
1.1	Icons Used	4
1.2	About this Manual	4
2	Product Description	5
2.1	Items Included	5
2.2	Components	5
3	Safety Instructions	6
3.1	Mounting the Speakers / Wall and Ceiling Installation	6
3.2	Intended Use	6
3.3	Maximum Load	6
4	Mounting and Use Instructions	7
4.1	Using the Quick Release Pins	7
5	Transportation and Storage	8
6	Care and Maintenance	8
7	Dimensions and Weight	9
8	Disposal	9
9	EC Declaration of Conformity	10

1. Introduction

Thank you for purchasing a KLING & FREITAG product. To guarantee trouble-free operation and enable the KLING & FREITAG LIFTING PIN speaker system to achieve its full potential, please read these user's manual carefully before use. This item is a quality accessory for the LIFTING PIN speaker system. Combining it with your existing speaker system creates an extremely versatile pro-grade tool that meets all requirements in terms of audio quality and safe installation.

1.1 Icons Used



Warning

This icon indicates a risk of injury or death. Not following these instructions may result in serious health problems including potentially fatal injuries.



Caution

This icon indicates a possibly dangerous situation. Not following these instructions may cause minor injuries or damage.



Notice

This icon marks instructions for proper use of the described products. Not following these instructions may cause malfunctions or damage.



Tip

This icon marks information provided for simplified use of the described products.

1.2 About this Manual

© KLING & FREITAG GmbH. All rights reserved.

All specifications regarding the features of the described products and applicable safety guidelines provided in this manual are based on information available at the time of publishing.

We assume no responsibility for technical specifications, dimensions, weights, and properties.

All information in this manual is subject to change without notice.

To ensure safe operation, all persons using the speaker accessories must have access to this guide and all other relevant material during installation. The speaker accessories must not be set up nor operated unless this manual has been read, understood and kept readily available on site.

All KLING & FREITAG manuals are originally authored in German.

KLING & FREITAG spare manuals are separately available for order or can be downloaded from our website: www.kling-freitag.de.


Contact Us: info@kling-freitag.de
KLING & FREITAG GMBH, Wohlenbergstr. 5, D-30179 Hannover
Phone +49 511 96 99 70, fax +49 511 67 37 94 (other countries)

2. Product Description

2.1 Items Included

- LIFTING PIN
- (1x) User manual

2.2 Components

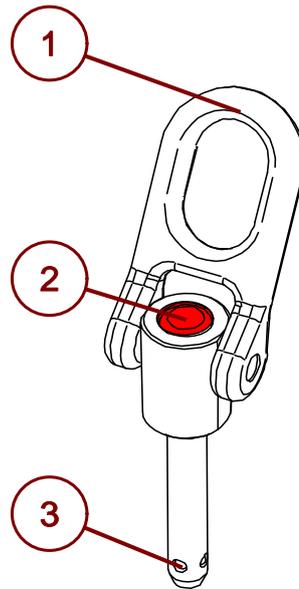

1. eyebolt
2. lock button
3. lock balls

3. Safety Instructions

3.1 Mounting the Speakers / Wall and Ceiling Installation



Warning

Suspended loads pose a safety risk.

Only qualified technicians are permitted to perform the installation steps. Be sure to use personal protective equipment at all times.

The technicians installing the speaker on site are responsible for and guarantee safe setup and use.

Never use signal cables or power cords for suspending, aligning, or securing the systems.

Before installing, check the stability, strength, and materials of walls, ceilings, and boarding. For example, use suitable rawplugs for wall panels and make sure the strength is sufficient.

Note that the suspension points on the hall ceiling (i.e. shackles, attachment points, or chain hoists) must comply with the DGUV regulations 17 and 18 or similar locally applicable accident-control standards. The maximum load must have been certified by an authorized expert.

Be sure to tighten all bolts and screws to the specified torque.

Unless otherwise stated, use only KLING & FREITAG original parts for mounting the speakers. Never use other parts (in particular, parts not made by KLING & FREITAG).

Make sure all fittings used are suitable for the task at hand and meet all relevant safety requirements.

Ensure that all connections are secured against coming loose and that only authorized, statically tested and correctly sized supports, mounting equipment, wire ropes and chains are used.

Be sure to always visually inspect all safety-related speaker and accessory components before use. If there are signs of wear, cracks, or deformation, etc., replace the affected parts immediately. Visual inspection also includes checking all screwed connections of supporting components.

The information described here does not relieve the user of the duty to follow the given safety requirements and legal regulations.

3.2 Intended Use



Warning

The accessories must be used only for the prescribed purpose and in the stated manner laid down in this document. LIFTING PIN

The LIFTING PIN may not be used to lift and secure people or objects other than the above-mentioned speaker systems.

The LIFTING PIN is protected from temporary climatic conditions. For long-term use, however, it is designed to be used indoors only.

3.3 Maximum Load



Warning

The LIFTING PIN must be used only with the loudspeakers GRAVIS 12N/W and NOMOS LS with the maximum load of 50 kg (BGV C1).

4. Mounting and Use Instructions




According to DGUV accident prevention regulations, a secondary safety component must be used when speakers are suspended with K&F LIFTING PINS.

This secondary safety component must allow no drop.

4.1 Using the Quick Release Pins

The LIFTING PIN has lock balls. By pushing the button in the middle of the pin, you can release these balls and then insert or remove the pin. As long as you do not push the button in the middle of the pin, you should not be able to pull out the pin.

- 1) To use the LIFTING PIN properly and safely, you have to press the release button A.
- 2) Insert the LIFTING PIN in the bore of the K&F VariPoints B.

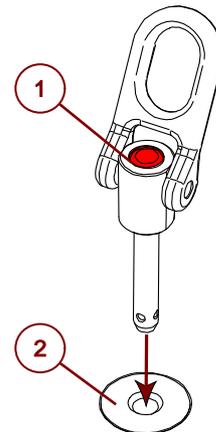

- 3) Let go of the release button when you have completely inserted the bolt so that the release button pops back up. AA

To make sure that the LIFTING PIN is locked, be careful when releasing the release button to hear a clicking sound.

- 4) Make sure that the accessory is fixed securely to the speaker.



5. Transportation and Storage

The speaker accessory LIFTING PIN is protected against short term moisture. despite, be sure to store, transport, and use the accessories in dry environments only. Speaker accessories are not designed for prolonged use in corrosive environments.

Make sure that the system is adequately ventilated during longer storage periods so any residual moisture can escape from the equipment.

Furthermore, you have to ensure that the accessory LIFTING PIN is protected from mechanical strain to prevent possible damage.

6. Care and Maintenance



Warning

1. For the owner and user, it is mandatory to be aware that speaker accessories used to fly or mount the speakers are fundamentally safety-relevant.

The accessory LIFTING PIN can exhibit signs of wear over the years, i.e. from mechanical strain, transport damage, corrosion, or improper handling.

As a basic principle, you must visually inspect the speaker accessory before and after you use it. LIFTING PIN For fixed installations, you must inspect it for signs of wear at regular intervals.

When performing those checks, particularly look for deformations, cracks, dents, damage to threads, and corrosion. Also check slings and lifts (e.g. shackles, chains, and steel ropes) carefully for wear and deformation.

If as a result of these checks any uncertainty should arise with regard to safety or if specific faults are found, stop using the accessories and send in the product to KLING & FREITAG GmbH for inspection and repairs, if necessary. LIFTING PIN

Inspection regulations may vary depending on application and country of use. Observe all applicable regulations; when in doubt, contact the local authorities.

Many countries require regular inspection of mounting components and accessories. An additional annual inspection is typically required to be performed by a technical expert. Moreover, a legally certified or official authority must perform a detailed inspection every four years.


Therefore, be sure to maintain an inspection log. Enter the values determined for each speaker and accessory during the periodic checks into this log. This way, relevant data are always at hand in case of inspection. The log should also document maintenance measures and inspection intervals and contain parts lists.

2. Clean this speaker accessory regularly using a corrosion-prevention penetrating oil (for example, WD-40®).

7. Dimensions and Weight

weight: 113 g

bearing capacity: 50 kg

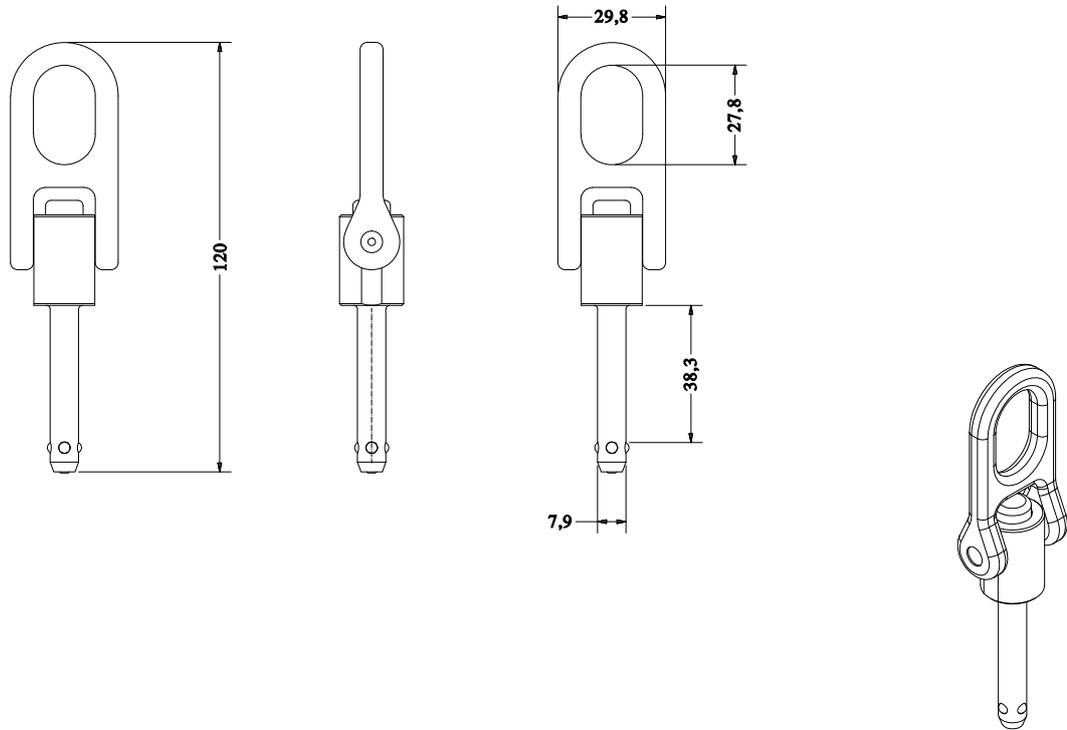

8. Disposal

Dispose of this product according to local ordinance regulations.

Ensure that the product cannot be re-used or used otherwise after disposal.

